

HEAT ON TRANSFERLOGO MANUAL

LP152

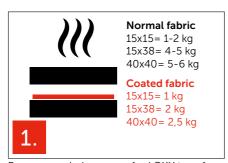


Recommended pressure for LOXY transfers.

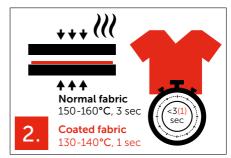

Pre-heat the fabric up to 3 or 1 seconds to remove residues, impurity and reduce shrinkage.



Apply the transfer, with the film facing upwards.

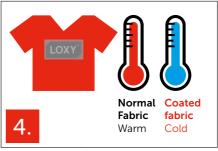

Hot Peel normal fabric and cold peel coated fabric



Some fabrics may require additional press. Use backside of the folio over the transfer.



The print has to rest 48 hours before starting washing procedure.

The above general recommended applications parameters must be tested and internally verified for different fabrics and applications. Some fabrics may require additional or deviating procedures.

